

Measuring Guide Worksheet



4 Things You Need to Know

A - Curb Weight

Weight of a vehicle without passengers or extra load.

B - Tire Spread


Distance between your tire tread.

C - Lifting Point Spread

Maximum point from outside one lifting point to the other outside lifting point. Same for the minimum.

D - Ground Clearance

It's important the fully lowered QuickJack has a bit of room between the rubber block and the lifting point.

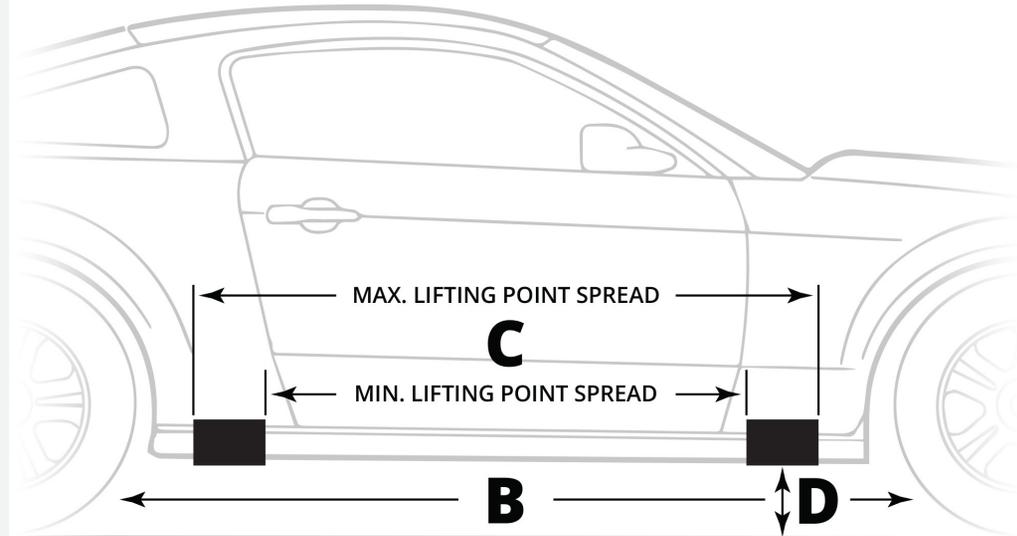

Getting Measurements

A - Locate the Curb Weight

You can find your vehicle's curb weight either on the driver's side door, in the manual or on the internet.

B - Measure the Tire Spread

Step 1 — Measure the distance between your front and rear tire treads, keeping the measuring tape 7,6cm above the ground.

Step 2 — Subtract 5cm from the measurement in Step 1. The result is your Tire Spread Measurement (Measurement B).

C - Measure Min. and Max. Lifting Point Spread

Step 1 — Measure the inside of your jacking point to the inside of the opposite jack point.

Step 2 — Measure the outside of your jacking point to the outside of the opposite jack point.

These two measurements will become your Lifting Point Spread (Measurement C).

D - Measure Ground Clearance

Measure the distance between the ground and jacking point. This is your Ground Clearance (Measurement D).

	A Curb Weight	B Tire Spread	C Lifting Spread	D Ground Clearance
Vehicle #1	_____	_____	_____	_____
Vehicle #2	_____	_____	_____	_____
Vehicle #3	_____	_____	_____	_____
Vehicle #4	_____	_____	_____	_____

Match vehicle measurements with requirements below

BL-3500SLX	≤ 1588-kg	≥ 156cm	68,5cm" (min) – 128,2cm" (max)	≥ 8,9cm"
BL-5000SLX	≤ 2268-kg	≥ 177,8cm	80cm" (min) – 152,4cm" (max)	≥ 8,9cm"
BL-7000SLX	≤ 2268-kg	≥ 194,31cm	95,2cm" (min) – 167,6cm" (max)	≥ 8,9cm"
BL-5000EXT	≤ 3175-kg	≥ 177,8cm	80cm" (min) – 1542,4cm" (max)	≥ 10cm"
BL-7000EXT	≤ 3175-kg	≥ 194,8cm	95,2cm" (min) – 167,6cm" (max)	≥ 10cm"

≤ less than or equal to, ≥ greater than or equal to